



5.2 Changing the filter

 After drawing off around 50 litres of water, the filter will cease to work. You will be prompted to change the filter. Please use the scale on the filter holder on the water tank to monitor how long the CLARIS filter cartridge has been in use (max. 2 months).

- **DISPLAY** READY
FILTER
- Press the Maintenance button  (3) until the following message appears:
- **DISPLAY** CHANGE
OPEN TAP
- Remove the water tank from the machine and empty it.
- Fold up the filter holder. Take out the old CLARIS filter cartridge and insert the new filter cartridge into the water tank, exerting slight pressure (Fig. 1).
- Close the filter holder until it audibly snaps into place.
- Fill the water tank with cold, fresh mains water and reinsert in the IMPRESSA.
- Place a sufficiently large receptacle (around 1 litre) under the Professional Cappuccino Frother (15) (Fig. 10) and open the steam / hot water draw-off tap (14) (Fig. 13).
- **DISPLAY** FILTER
RINSING
- **DISPLAY** CLOSE TAP
- Close the steam / hot water draw-off tap (14).
- **DISPLAY** HEATING
- **DISPLAY** READY

