17. Cleaning

The IMPRESSA machine comes with an integrated Cappuccino cleaning programme. The operation lasts about 15 minutes.

- Your stockist can supply original JURA cleaning tablets which are optimised for the cleaning programme of your IMPRESSA. We would like to point out that using unsuitable cleaning tablets may damage your machine and leave traces in the water.
- Once started, the cleaning operation must not be interrupted.
- The filler funnel for preground coffee must be cleaned after every cleaning programme (11).
- DISPLAY READY CLEAN
- DISPLAY EMPTY
 TRAY
- Empty the drip tray.
- DISPLAY TRAY
 MISSING
- Carefully reinsert the drip tray.
- Remove the cup grille (19).

- Place a 1 litre receptacle (Fig. 12) under the height-adjustable coffee spout (17).
- DISPLAY PRESS RINSE
- DISPLAY CLEANING
- DISPLAY ADD TABLET
- Add the tablet to the powder shaft (Fig. 15). Close the powder shaft.
- DISPLAY PRESS RINSE
- Press the Maintenance button 🏡 (3).
- DISPLAY CLEANING
- DISPLAY EMPTY TRAY
- Remove and empty the drip tray.
- DISPLAY TRAY
 MISSING
- Reinsert the drip tray.
- DISPLAY HEATING
- DISPLAY READY
- Once the cleaning operation is complete, use a dry cloth to rub down the powder shaft.
- Cleaning is complete.



































