


Changing the filter

- i** After 50 litres of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.
- i** After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.
- i** If the CLARIS Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.
- i** CLARIS filter cartridges are available from specialised dealers.

 


Precondition: **READY / FILTER** is displayed and the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

FILTER CHANGE

- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLARIS Blue filter cartridge.
- ▶ Insert a new CLARIS Blue filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.





- ▶ Place a receptacle (at least 300 ml) under the fine foam frother.
-  ▶ Press the Rotary Switch.
SWITCH OPEN
The arrow on the switch lights up.
-  ▶ Turn the switch to the  position.
FILTER RINSING, water flows out of the fine foam frother.

i You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.

i The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 300 ml. **SWITCH CLOSE** appears on the display.

-  ▶ Turn the switch to the  position.
The illuminated arrow on the switch goes out.
HEATING, the machine heats up.
READY appears on the display.