

## Cleaning the machine


After 200 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.


### CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.


- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

**Precondition:** **READY / CLEAN** is displayed and the Maintenance button  lights up.


-  ▶ Press the Maintenance button.

**EMPTY TRAY**

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

**PRESS RINSE**, the Maintenance button  lights up.

- ▶ Place a receptacle under the coffee spout.

-  ▶ Press the Maintenance button.

**CLEANING**, water flows out of the coffee spout.

 
The operation is interrupted, **ADD TABLET**.


- ▶ Open the cover of the filler funnel for ground coffee.



- ▶ Insert a JURA cleaning tablet into the filler funnel.

- ▶ Close the cover of the filler funnel.

**PRESS RINSE**, the Maintenance button  lights up.

-  ▶ Press the Maintenance button.

**CLEANING**, water flows out of the coffee spout several times.

The operation stops automatically.

**EMPTY TRAY**

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

**HEATING**

**READY** appears on the display. Cleaning is now complete.

Your IMPRESSA is once more ready for use.