

## Cleaning the machine

After 200 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

### CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

**Precondition:** 'Clean machine' is displayed.

- P** ▶ Press the P button.  
'Maintenance status' ('1/7')
- ▶ Press the 'Clean' button.  
'Clean'
- ▶ Press the 'Start' button.
- ▶ Press the 'Start' button again.  
'Empty grounds'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
'Press the Rotary Switch'
- ▶ Place a receptacle under the coffee spout.
- ⏻** ▶ Press the Rotary Switch.  
'Machine is being cleaned', water flows out of the coffee spout.  
The operation is interrupted, 'Add cleaning tablet'.
- ▶ Open the cover of the filler funnel for ground coffee.
- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.  
'Press the Rotary Switch'
- ⏻** ▶ Press the Rotary Switch.  
'Machine is being cleaned', water flows out of the coffee spout several times.  
The operation stops automatically.  
'Empty grounds'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
'Please select product' appears on the display. Cleaning is now complete.

