


## Changing the filter

- i** Once the filter cartridge stops working (depending on the water hardness setting), the JURA will prompt you to change the filter.
- i** CLARIS Smart filter cartridges are available from specialised dealers.

**Precondition:** The start screen is displayed. The filter symbol at the bottom of the display lights up red.

- ▶ Remove and empty the water tank.
- ▶ Turn the filter cartridge anticlockwise and remove it along with the extension from the water tank.

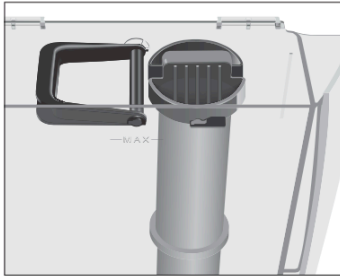

- ▶ Fit the filter cartridge extension on top of a **new** CLARIS Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

'Saved' appears briefly on the display. The machine has automatically detected that you have just changed the filter cartridge.

'Switch open'

- ▶ Place a receptacle (at least 300 ml) under the fine foam frother.
  - ▶ Turn the switch to the ☰ position.
- 'Filter is being rinsed', water flows out of the fine foam frother.



- i** You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.
- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 300 ml. 'Switch close' appears on the display.

- ▶ Turn the switch to the ⊙ position.
- The start screen is displayed.