

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the JURA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: 'Clean machine' is displayed.

- ▶ Press the 'Maintenance' button (red Maintenance symbol).
'Clean'
- ▶ Press the 'Start' button.
- ▶ Press the 'Next' button.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Clean'
- ▶ Place a receptacle under the coffee spout.
- ▶ Press the 'Next' button.
'Machine is being cleaned', water flows out of the coffee spout.
The operation is interrupted, **'Add cleaning tablet'**.
- ▶ Open the cover of the filler funnel for the cleaning tablet.
- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
- ▶ Press the 'Next' button.
'Machine is being cleaned', water flows out of the coffee spout several times.
The operation stops automatically.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
Cleaning is now complete. The start screen is displayed.

